

If you are moving the Master Module to a different location, make sure "Boiler demand disabled" is set to **No**



Each control module is plug and play.

Each module has a dip switch located on the side, set for 1 through eight.

Dip Switches under cover



1st Module is to be set to the LEFT.
All other modules are set to the RIGHT



Once the control module is replaced, each module that is replaced needs to be reconfigured.

While connected to the 1st master module, do the following:

Under Boiler Settings, Go to Appliance Configuration



Configure Module Controls After Replacement:

For all Dependant Modules (not the master)

(97) 13

(98) 17 (for natural gas only)

Change Configuration Confirmed to "Yes"

...and hit OK



The 1st Master Module Control is set to:

(97) 12

(98) 17 (for natural gas only)

Change Configuration Confirmed to "Yes"

...and hit OK

Configure the Master, even if just a dependent Module is Replaced